
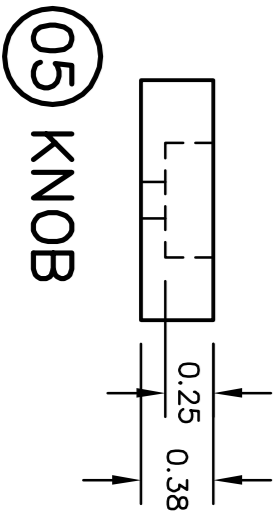


01 DOWN TUBE ASSEMBLY

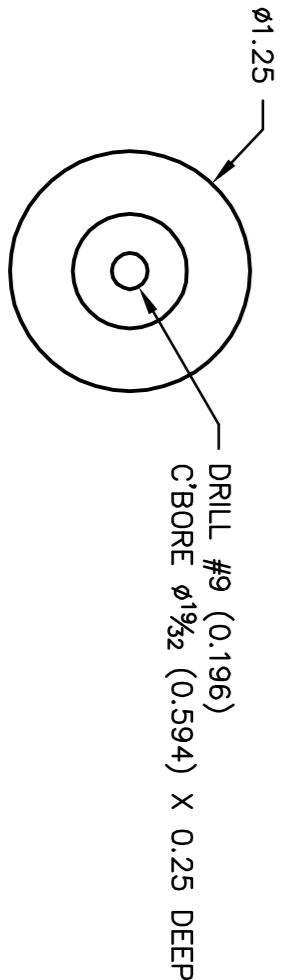

NOTES
1. REMOVE ALL BURRS AND BREAK SHARP EDGES.

QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
1	MS21044N5	NUT				
1	AN960-516	WASHER				
1	AN45-7A	EYEBOLT				
2	MS21044C3	NUT				
2	#10-32	C/SUNK SCREW		STAINLESS STEEL		
2	69830-23	06 SPRING			15mm X 70mm SPRING	
1	82815-05	05 KNOB		6061-T6 ALUMINUM	QQ-A-200/8	Ø1.25 ROD
1	69830-22	04 KNOB		6061-T6 ALUMINUM	QQ-A-200/8	Ø0.75 ROD
2	69830-21	03 STOP		6061-T6 ALUMINUM	QQ-A-200/8	Ø0.625 ROD
1	82832-01	02 DOWN TUBE				
1	82815-01	01 DOWN TUBE ASSEMBLY				
LIST OF MATERIALS						
QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE

APPROVALS		DATE	AERO DESIGN LTD. CONSULTING ENGINEERS, TRANSPORT CANADA APPROVALS, DAR 2904 2013 - 39TH AVENUE N.E., CALGARY, ALBERTA, CANADA, T2E 6R7 tel: (403) 250-8027 fax: (403) 250-8939 www.aerodesign.ca			
DRAWN: JEFF CLARKE		10 NOV 2008				
CHECKED: E. BURGOIN						
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 X.XX ±0.03 X.X ±0.1			MCDONNELL DOUGLAS MD600N QUICK RELEASE CARGO BASKET DOWN TUBE ASSEMBLY			
			SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.
			SHEET 1 OF 1	A1	82815	0